



4257-1849 A



Uninterruptible Power Systems

6/10kVA

Operation Manual

All rights reserved.

The information in this document is subject to change without notice.

Publish statement

Thank you for purchasing this series UPS.

This series UPS is an intelligent, single phase in single phase out, high frequency online UPS designed by our R&D team who is with years of designing experiences on UPS.

With excellent electrical performance, perfect intelligent monitoring and network functions, smart appearance, complying with EMC and safety standards, The UPS meets the world's advanced level.

Read this manual carefully before installation

This manual provides technical support to the operator of the equipment.

Contact the nearest hazardous waste disposal station when the products or components are discarded

Contents

| | |
|--|-----------|
| 1 . Safety | 2 |
| 1.1 Safety notes | 2 |
| 1.2 Symbols used in this guide | 2 |
| 2 . Main Features..... | 3 |
| 2.1 Summarization | 3 |
| 2.2 Functions and Features | 3 |
| 3 . Installation | 4 |
| 3.1 Sub Rack UPS | 4 |
| 3.2 Tower UPS..... | 5 |
| 3.3 Cabinet Outlook | 5 |
| 3.4 LCD control panel | 6 |
| 3.5 Installation notes..... | 7 |
| 3.6 External Protective Devices..... | 8 |
| 3.7 Power Cables..... | 8 |
| 3.8 Power cable connect..... | 10 |
| 3.9 Battery connection | 11 |
| 3.10 UPS parallel Installation | 14 |
| 3.11 Maintenance breaker auxiliary signal cable connection | 15 |
| 3.12 Computer access | 16 |
| 4 . Operation | 17 |
| 4.1 Operation Modes | 17 |
| 4.2 Turn on/off UPS..... | 19 |
| 4.3 The LCD Display..... | 22 |
| 4.4 Parallel parameters setting..... | 36 |
| 4.5 Display Messages/Troubleshooting | 38 |
| 4.6 Options..... | 40 |
| Appendix 1 Specifications..... | 42 |
| Appendix 2 Problems and Solution..... | 44 |
| Appendix 3 USB communication port definition | 45 |
| Appendix 4 RS232 communication port definition..... | 46 |
| Appendix 5 RS485 communication port definition..... | 47 |
| Appendix 6 COM communication port definition | 48 |
| Appendix 7 EPO instruction..... | 49 |
| Appendix 8 Optional port definition | 50 |

1 . Safety

Important safety instructions - Save these instructions

There exists dangerous voltage and high temperature inside the UPS. During the installation, operation and maintenance, please abide the local safety instructions and relative laws, otherwise it will result in personnel injury or equipment damage. Safety instructions in this manual act as a supplementary for the local safety instructions. Our company will not assume the liability that caused by disobeying safety instructions.

1.1 Safety notes

1. Even no connection with utility power, 208/220/230/240VAC voltage may still exist at UPS terminal!
2. For the sake of human being safety, please well earth the UPS before starting it.
- 3 . Don't open or damage battery, for the liquid spilled from the battery is strongly poisonous and do harmful to body!
- 4 . Please avoid short circuit between anode and cathode of battery, otherwise, it will cause spark or fire!
- 5 . Don't disassemble the UPS cover, or there may be an electric shock!
- 6 . Check if there exists high voltage before touching the battery
- 7 . Working environment and storage way will affect the lifetime and reliability of the UPS. Avoid the UPS from working under following environment for long time
 - ◆ Area where the humidity and temperature is out of the specified range(temperature 0 to 40°C, relative humidity 5%-95%)
 - ◆ Direct sunlight or location nearby heat
 - ◆ Vibration Area with possibility to get the UPS crashed.
 - ◆ Area with erosive gas, flammable gas, excessive dust, etc
- 8 . Keep ventilations in good conditions otherwise the components inside the UPS will be over-heated which may affect the life of the UPS.

1.2 Symbols used in this guide



WARNING!

Risk of electric shock



CAUTION!

Read this information to avoid equipment damage

2 . Main Features

2.1 Summarization

This series UPS is a kind of single-in-single-out high frequency online UPS.

The UPS can solve most of the power supply problems, such as blackout, over-voltage, under-voltage, voltage sudden drop, oscillating of decreasing extent, high voltage pulse, voltage fluctuation, surge, inrush current, harmonic distortion (THD), noise interference, frequency fluctuation, etc..

This UPS can be applied to different applications from computer device, automatic equipment, communication system to industry equipment.

2.2 Functions and Features

- ◆Integrated solution for data center

UPS can be integrated with battery cabinet, PDU external maintenance bypass, offering excellent choice for data center.

- ◆Digital Control

This series UPS is controlled by Digital Signal Processor (DSP); enhance, it increases reliability, performance, self-protection, and self-diagnostics and so on.

- ◆Battery Configurable

This series of UPS can be equipped with 16 blocks 7/9Ah batteries.

- ◆Charging Current is configurable

Via setting tool, the user may set the capacity of the batteries as well as reasonable charging current. Constant voltage mode, constant current mode or floating mode can be switched automatically and smoothly.

- ◆Intelligent Charging Method

The series UPS adopts advanced three-stage charging method—

1st stage: high current constant current charging

to guarantee to charge back to 90%;

2nd-stage: Constant Voltage

In order to vitalize battery and make sure batteries are fully charged

3rd stage: floating mode.

With this 3-stage charging method, it extends the life of the batteries and guarantees fast charging.

- ◆LCD Display

With LCD plus LED displays, the user may easily get UPS status and its operational parameters, such as input/output voltage, frequency & load%, battery % and ambient temperature, etc...

- ◆Intelligent Monitoring Function

Via optional SNMP Card, you may remotely control and monitor the UPS.


- ◆EPO Function

The series UPS may be completely shut off when the EPO is activated.

3 . Installation


3.1 Sub Rack UPS

3.1.1 Appearance of UPS

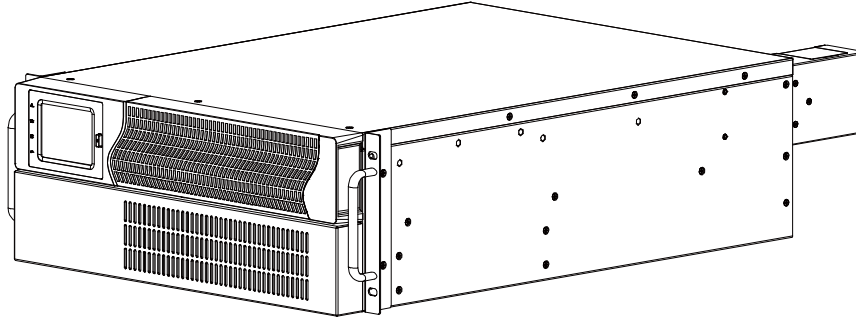


3.1.2 Installation

Fix the rails to the cabinet.

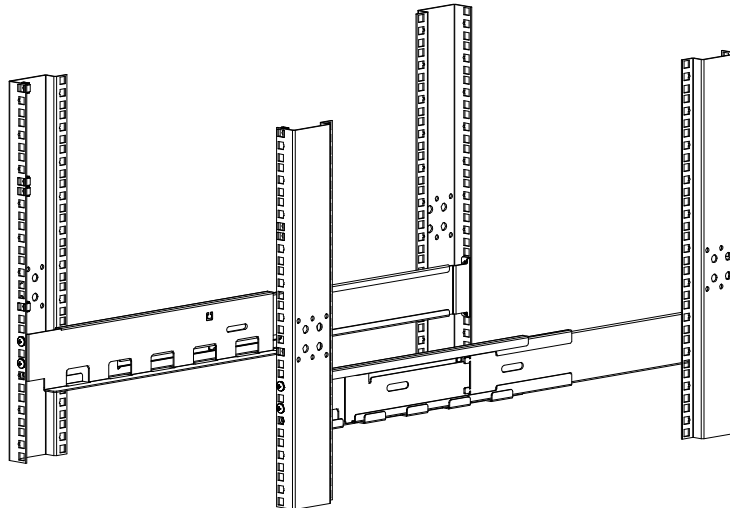


After installing the rails, install the floating screw according to the front panel of the UPS, then insert the UPS into the cabinet on the rails and fix the screws.

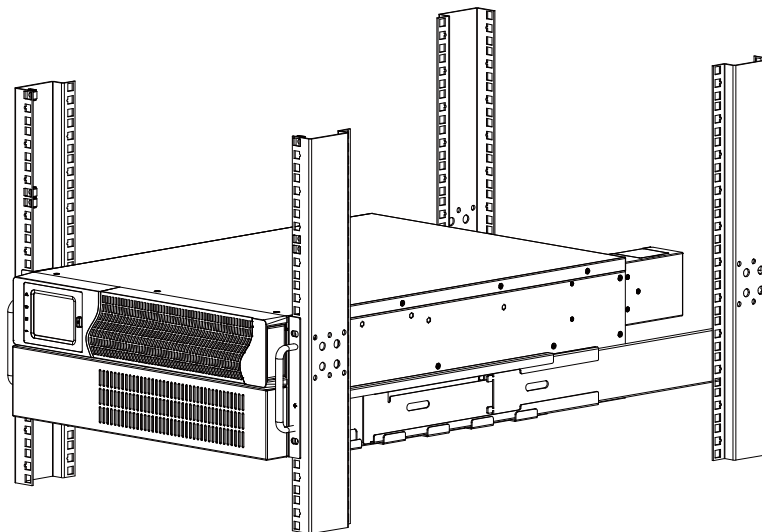


3.2 Tower UPS

3.2.1 Installation


Assemb the bracket, according to the size of the UPS, and then the UPS can be directly placed on the bracket.

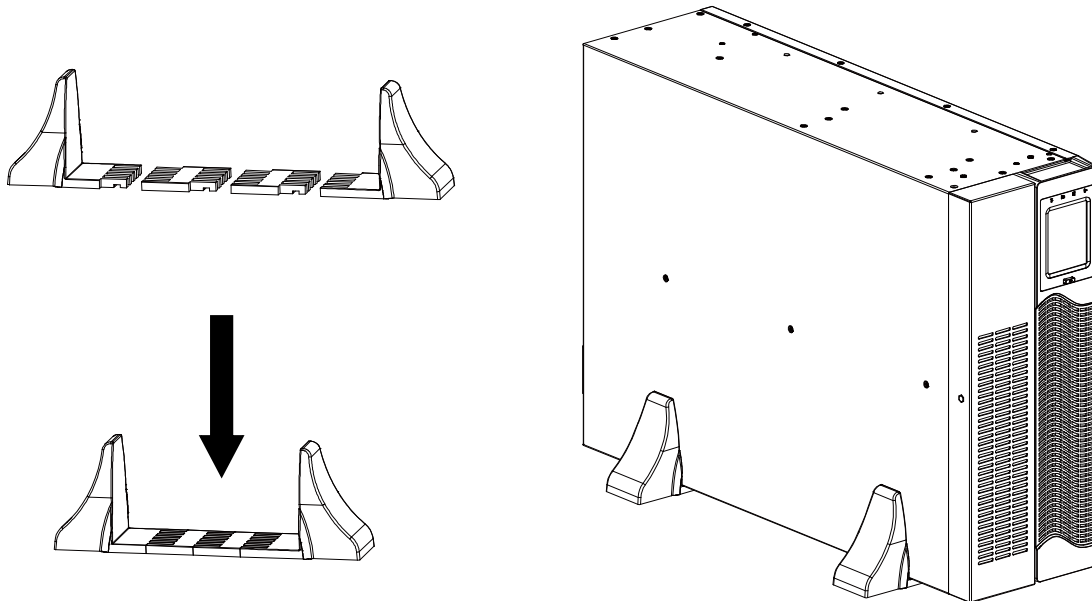


3.3 Cabinet Outlook

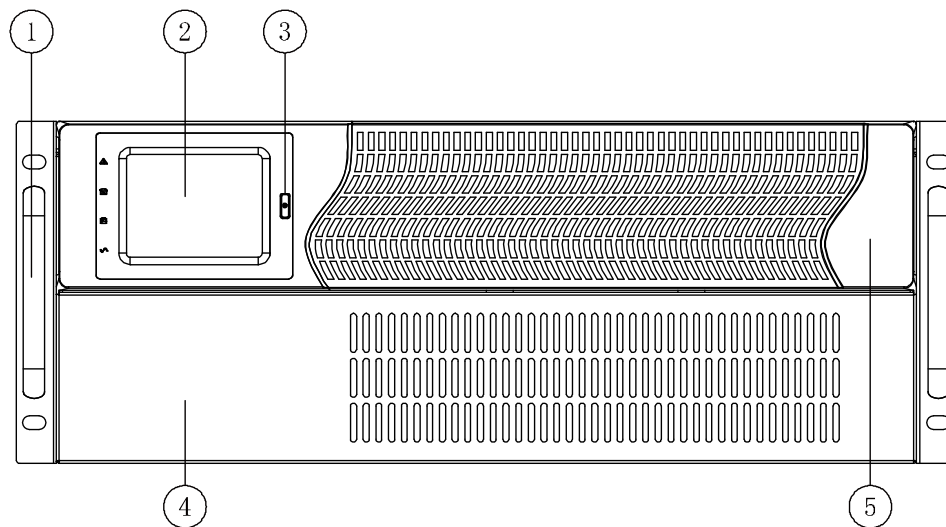

Front View

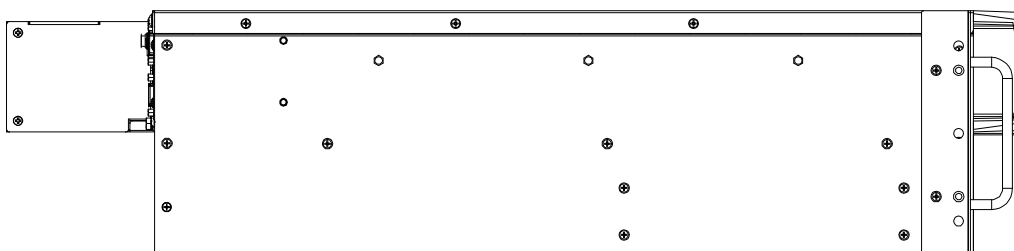


Side View

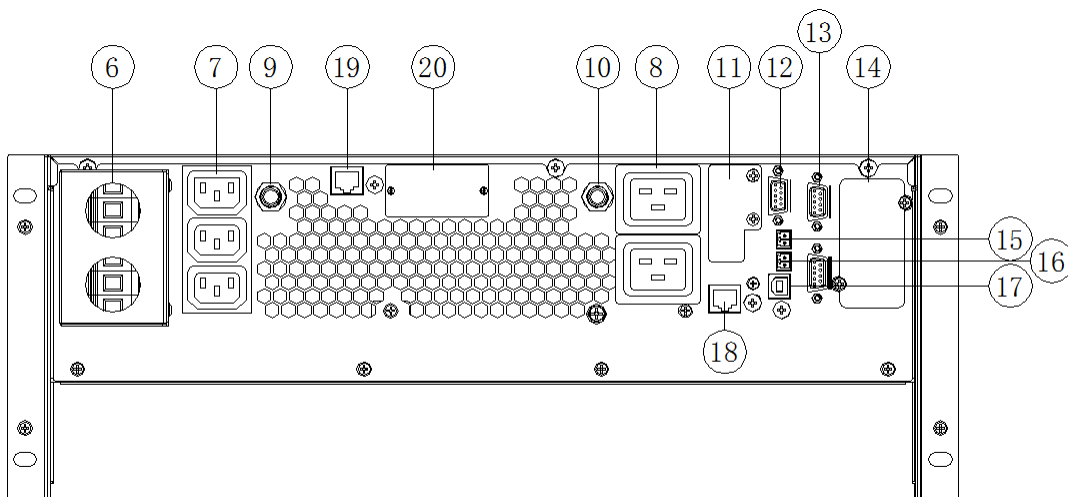

Rear View

| | |
|---------------------------|----------------------------------|
| (1) Suspension Loop | (2) LCD |
| (3) Cold-Start Button | (4) Built-in battery front panel |
| (5) Plastic front panel | (6) Input & Output1 Terminal |
| (7) Output3 Socket C13 | (8) Output2 Socket C19 |
| (9) Output3 Breaker | (10) Output2 Breaker |
| (11) Battery Terminal | (12) RS232 port |
| (13) Parallel port | (14) Intelligent Slot 1 |
| (15) MAINTAIN-AUXSWS port | (16) EPO port |
| (17) USB port | (18) RS485 port |
| (19) COM port | (20) Intelligent Slot 2 |

3.4 LCD control panel

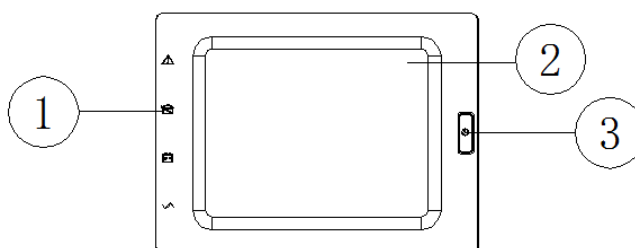

LCD control panel introduction

- (1) LED (from top to bottom: "alarm", "bypass", "battery", "inverter") (2) LCD display
 (3) Cold-Start button

3.5 Installation notes

Note: Consider for the convenience of operation and maintenance, the space in front and back of the cabinet should be left at least 100cm and 80cm respectively when installing the cabinet.

- ◆Please place the UPS in a clean, stable environment, avoid the vibration, dust, humidity, flammable gas and liquid, corrosive. To avoid from high room temperature, a system of room extractor fans is recommended to be installed. Optional air filters are available if the UPS operates in a dusty environment.

- ◆The environment temperature around UPS should keep in a range of 0°C ~ 40°C. If the environment temperature exceeds 40°C, the rated load capacity should be reduced by 10% per 4°C. The max temperature can't be higher than 50°C.

- ◆If the UPS is dismantled under low temperature, it might be in a condensing condition. The UPS can't be installed unless the internal and external of the equipment is fully dry. Otherwise, there will be in danger of electric shock.

- ◆Batteries should be mounted in an environment where the temperature is within the required specs. Temperature is a major factor in determining battery life and capacity. In a normal installation, the battery temperature is maintained between 15°C and 25°C. Keep batteries away from heat sources or main air ventilation area, etc.



WARNING!

Typical battery performance data are quoted for an operating temperature between 20°C and 25°C. Operating it above this range will reduce the battery life while operation below this range will reduce the battery capacity.

- ◆Should the equipment not be installed immediately it must be stored in a room so as to protect it against excessive humidity and or heat sources.



CAUTION!

An unused battery must be recharged every 6months Temporarily connecting the UPS to a suitable AC supply mains and activating it for the time required for recharging the batteries.

- ◆The highest altitude that UPS may work normally with full load is 1000 meters. The load capacity should be reduced when this UPS is installed in place whose altitude is higher than 1000 meters, shown as the following table:

(Load coefficient equals max load in high altitude place divided by nominal power of the UPS)

| Altitude (m) | 1000 | 2000 | 2500 | 3000 |
|------------------|------|------|------|------|
| Load coefficient | 100% | 90% | 85% | 80% |

- ◆The UPS cooling is depending on fan, so it should be kept in good air ventilation area. There are many ventilation holes on the front and rear, so they should not be blocked by any exotic obstacles.

3.6 External Protective Devices

For safety reasons, it is necessary to install, external circuit breaker at the input A.C. supply and the battery. This chapter provides guidelines for qualified installers that must have the knowledge of local wiring practices for the equipment to be installed.

◆External Battery

The UPS and its associated batteries are protected against the effect of over-current through a DC compatible thermo-magnetic circuit-breaker (or a set of fuses) located close to the battery.

◆UPS Output

Any external distribution board used for load distribution shall be fitted with protective devices that may avoid the risk of UPS overloaded.

◆Over-current

Protection device shall be installed at the distribution panel of the incoming main supply. It may identify the power cables current capacity as well as the overload capacity of the system.

3.7 Power Cables

◆The cable design shall comply with the voltages and currents provided in this section, Kindly follow local wiring practices and take into consideration the environmental conditions (temperature and physical support media) .



WARNING!

Upon starting. Please ensure that you are aware of the location and operation of the external isolators which are connected to the UPS input/bypass supply of the mains distribution panel. Check to see if these supplies are electrically isolated. And post and necessary warning signs to prevent any inadvertent operation.



CAUTION!

In order to maintain compliance with the EMC directive for products sold in Europe, output cord attached to the UPS must not exceed 10 meters in length.

3.7.1 Recommended cross-sectional areas for power cables

| UPS cabinet | Cable Dimension | | | |
|-------------|-----------------------------|------------------------------|-----------------------------|------------------------------|
| | AC Input (mm ²) | AC Output (mm ²) | DC Input (mm ²) | Grounding (mm ²) |
| 6kVA | 6 | 6 | 6 | 6 |
| 10kVA | 10 | 10 | 10 | 10 |

- ◆ When selecting, connecting, and routing power cables, follow local safety regulations and rules.
- ◆ If external conditions such as cable layout or ambient temperatures change, perform verification in accordance with the local regulations.
- ◆ The nominal battery discharge current refers to the current of twenty 12 V batteries at 240V in standard configuration.
- ◆ The battery cable specifications are selected based on 16 batteries by default and compatible with application scenarios with 16–20 batteries.

3.7.2 Power cable connector requirements

| Model | Connector | Connection Mode | Bolt Type | Bolt Hole Diameter | Torque |
|---------|---------------------|----------------------|-----------|--------------------|--------|
| 6/10kVA | input connector | Crimped IT terminals | M4 | 4.5mm | 3N•m |
| | Output connector | Crimped IT terminals | M4 | 4.5mm | 3N•m |
| | Grounding connector | Crimped IT terminals | M4 | 4.5mm | 3N•m |

3.7.3 Recommended input front-end and output back-end circuit breakers

| Model | Input circuit breaker | Maintenance circuit breaker | Output circuit breaker | Battery circuit breaker |
|-------|-----------------------|-----------------------------|------------------------|-------------------------|
| 6kVA | 40A 1P | 40A 1P | 40A 1P | 50A 2P |
| 10kVA | 63A 1P | 63A 1P | 63A 1P | 63A 2P |



CAUTION!

Protective earth cable: Connect each cabinet to the main ground system. For Grounding connection, follow the shortest route possible.



WARNING!

Failure to follow adequate earthing procedures may result in electromagnetic interference or in hazards involving electric shock and fire


3.8 Power cable connect


Once the equipment has been finally positioned and secured, connect the power cables as described in the following procedure.

Verify the UPS is totally isolated from its external power source and also all power isolators of the PDU are open. Check to see if they are electrically isolated, and post any necessary warning signs to prevent their inadvertent operation.


Open the UPS rear panel; Remove the cover of terminals for wiring easily.

3.8.1 Input connection

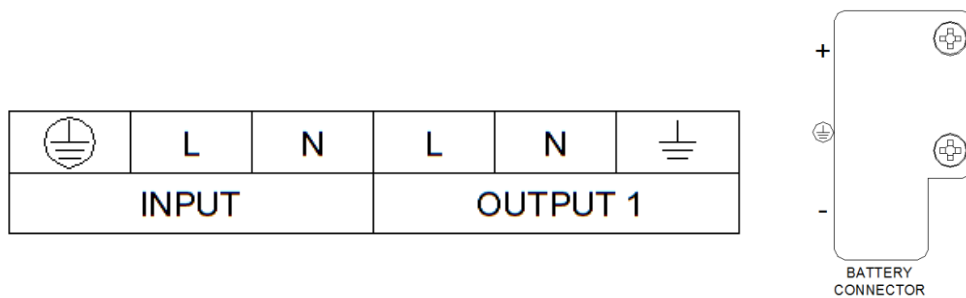

| | |
|---|--|
| INPUT-L: Primary input Phase L | INPUT -N: Primary input Phase N |
| OUTPUT1-L: Output Phase L | OUTPUT1-N: Output Phase N |
|  : Grounding | BAT+: Positive terminal of the batteries string |
| BAT-: Negative terminal of the batteries string | |

Choose appropriate power cable. (Refer to the table above) and pay attention to the diameter of the connection terminal of the cable that should be greater than or equal to that of the connection poles;

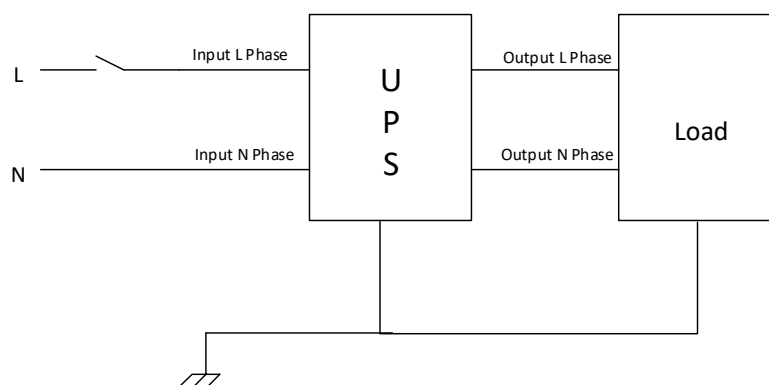

WARNING!

If the load equipment is not ready to accept power on the arrival of the commissioning engineer then ensure that the system output cables are safely isolated at their ends

Connect the safety earth and any necessary bonding earth cables to the copper earth screw located on the floor of the equipment below the power connections. All cabinets in the UPS must be grounded properly.



CAUTION!


The earthing and neutral bonding arrangement must be in accordance with local and national codes of practice.

3.9 Battery connection

3.9.1 Built-in battery connection

This series of UPS can be equipped with 16 blocks 7/9Ah batteries, and users can assemble or replace the built-in batteries according to the following diagram.

Built-in battery connections:

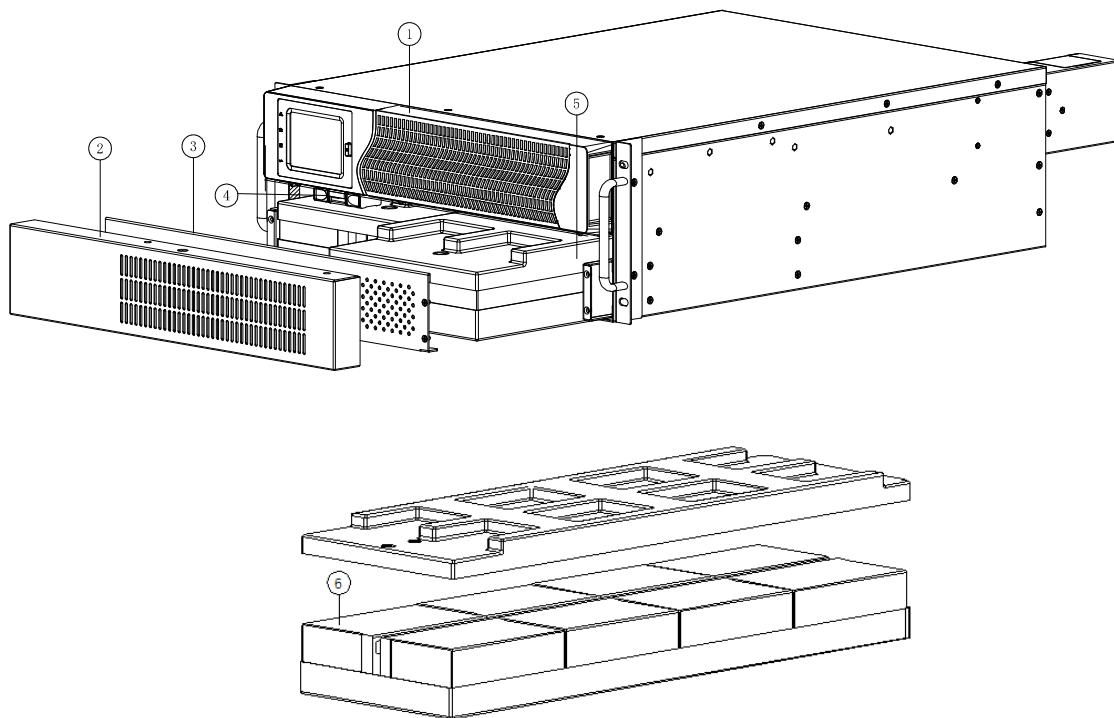


| | |
|--------------------------------------|----------------------------------|
| (1) Plastic front panel | (2) Built-in battery front panel |
| (3) Built-in battery barrier bracket | (4) Built-in battery connector |
| (5) Battery tray | (6) Built-in battery |

Battery replacement operation :

Put the UPS on a level, take off the plastic front panel. Remove the 3 top screws of the front panel with built-in battery (Please note that one screw needs to be removed from the top to the bottom direction). Then remove the 4 screws of the battery baffle bracket and take out the battery barrier bracket. Disconnect all of the battery connectors, then pull out the battery tray and remove the battery tray top covers for easier battery installation and connection.

Schematic diagram of built-in battery connection:

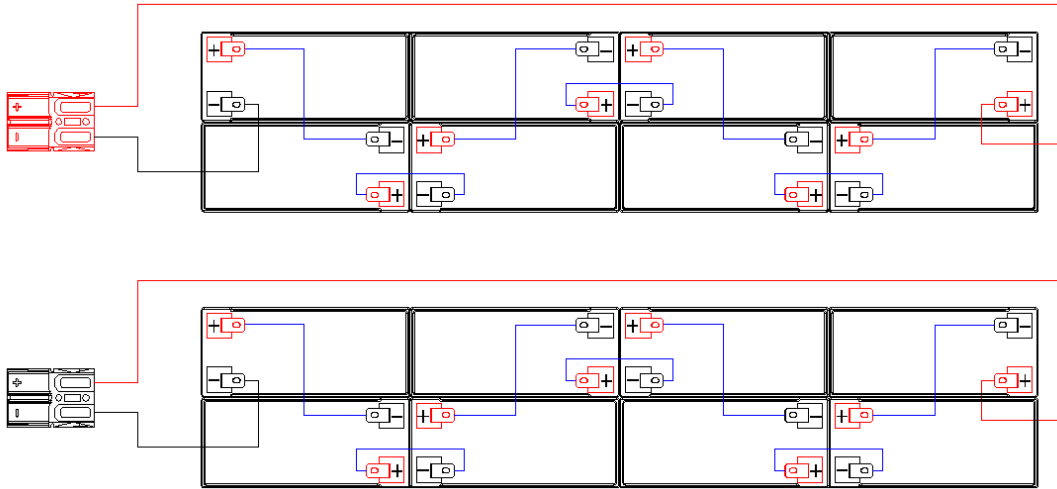


CAUTION!

Only battery specifically designed for this series of UPS can be used, and require batteries of the same model and capacity. Cannot mix with battery from other brands. When replacing the built-in battery, do not short-circuit the positive and negative terminals of the battery, and ensure that each battery is connected in series normally.

3.9.2 External battery connection

This series of UPS is equipped with an external battery connector, which can be connected to an external battery group. The number of battery cells per group is 16 blocks.

External battery connections:

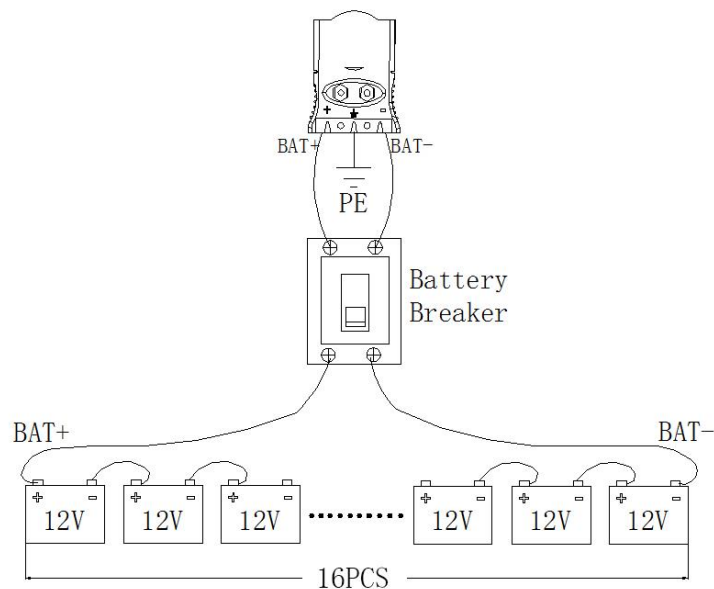

Note :

The BAT+ of the UPS connect poles is connected to the anode of the positive battery, the BAT- is connected to the cathode of the negative battery.

The factory setting of battery quantity---16pcs, battery capacity---12V7Ah (charger

current 1A). When connecting 12V9Ah batteries, please re-set desired battery capacity after UPS starts at AC mode. Charger current could be adjusted automatically according to battery capacity selected. All related settings can be done through LCD panel or monitoring software.



CAUTION!

Ensure correct polarity battery string series connection. I.e. inter-tier and inter block connections are from (+) to (-) terminals.


Don't mix batteries with different capacity or different brands, or even mix up new and old batteries, either.



WARNING!

Ensure correct polarity of string end connections to the Battery Circuit Breaker and from the Battery Circuit Breaker to the UPS terminals i.e. (+) to (+) / (-) to (-) but disconnect one or more battery cell links in each tier. Do not reconnect these links and do not close the battery circuit breaker unless authorized by the commissioning engineer.

3.9.3 Battery pack connection

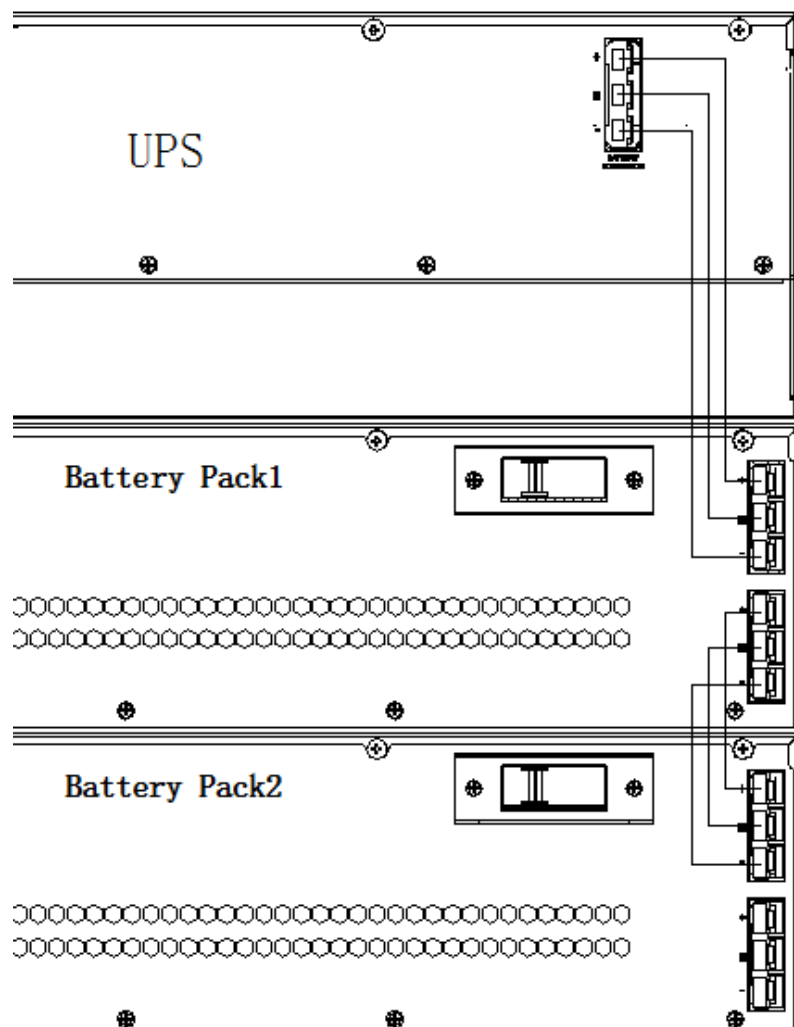

Note :

The BAT+ of the UPS battery connector is connected to the BAT+ of the battery pack connector, the BAT- of the UPS battery connector is connected to the BAT- of the battery pack connector. And the PE of the UPS battery connector is connected to the PE of the battery pack connector.



WARNING!


Only battery packs specifically designed for this series of UPS can be used, and cannot be mixed with battery packs from other brands. When using multiple battery packs in parallel, ensure that their positive and negative terminals of connectors are connected correctly.

3.10 UPS parallel Installation

The following sections introduce the installation procedures specified to the parallel system.

3.10.1 Cabinet installation

Connect all the UPS needed to be put into parallel system as below picture.

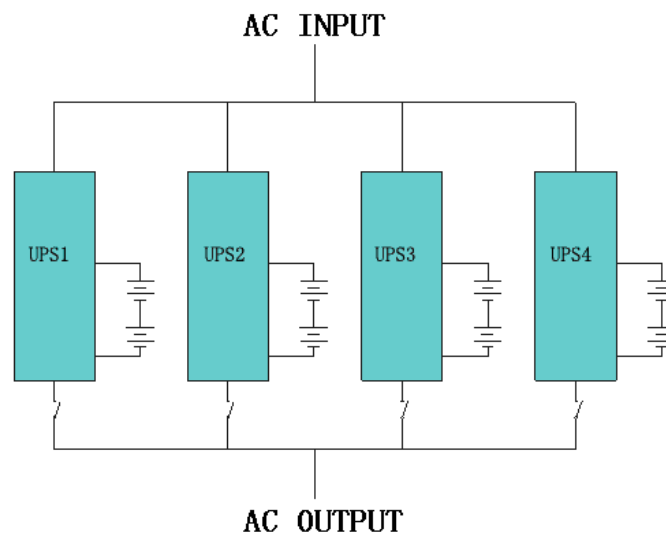

Make sure each UPS input breaker is in “off” position and there is no any output from each UPS connected.




WARNING!

Make sure the L, N lines are correct, and grounding is well connected. Each battery groups of UPS only be connected separately.

3.10.2 Parallel cable installation

Shielded and double insulated control cables available must be interconnected in a ring configuration between UPS units as shown below. The ring configuration ensures high reliability of the control.

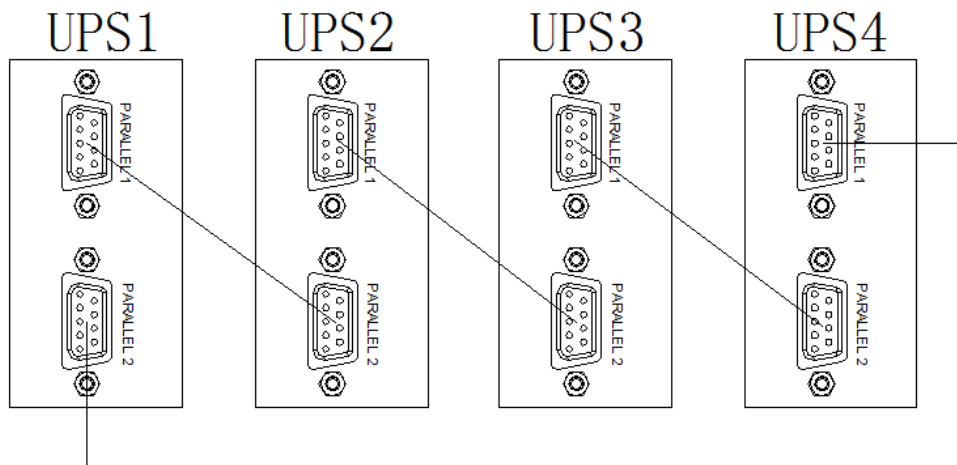


3.10.3 Requirement for the parallel system

A group of paralleled UPS behaves as one large UPS system but with the advantage of presenting higher reliability. In order to assure that all UPS are equally utilized and comply with relevant wiring rules, please follow the requirements below:

- 1) All UPS must be of the same rating and be connected to the same bypass source.
- 2) The outputs of all the UPS must be connected to a common output bus.
- 3) The length and specification of power cables including the bypass input cables and the UPS output cables should be the same. This facilitates load sharing when operating in bypass mode.


3.11 Maintenance breaker auxiliary signal cable connection

- ◆ Connect the auxiliary contact interface of the maintenance breaker of the PDU and the dry contact interface of the ups output dry port with cables. The dry contact of the UPS is normally closed logic and can be enabled when the interface is opened.
- ◆ When the maintenance breaker cover of the PDU is opened, the ups connected to the breaker will receive the dry contact signal and enter the maintenance state automatically.

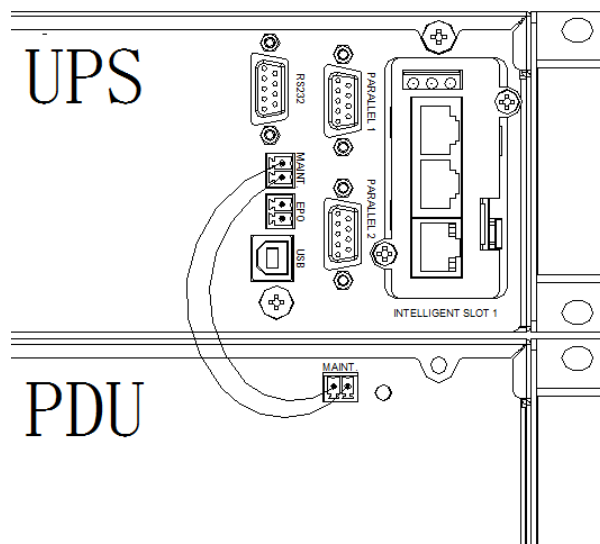


3.12 Computer access

- ◆Download the Kpower software and User Manual from the website in the Kpower User Manual attached to UPS to learn the specific usage method.
- ◆One end of a USB cable connect to the computer, the other end connect to the USB port on the UPS.
- ◆Open the software Kpower.
- ◆KPower adopts a flat design concept, the software concentrates all functions in the same window, the interface is simple and easy to operate. The main interface of the KPower program is shown as follows:

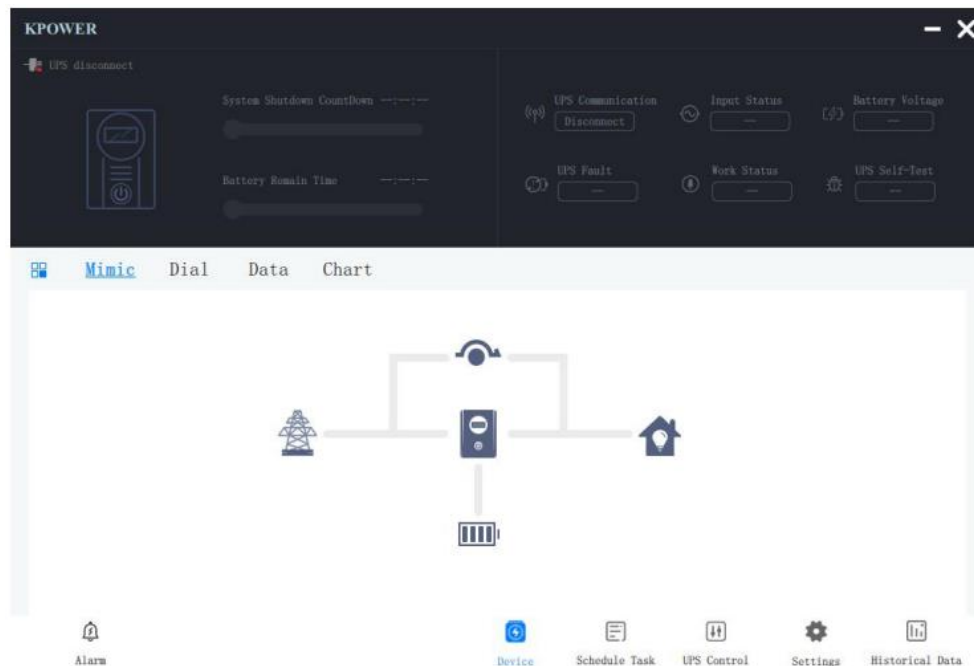

- ◆The device page is the main interface of the KPower software. The upper left corner of the page displays the communication connection status with the UPS. When the communication connection is successful, the interface will display that the UPS is connected.

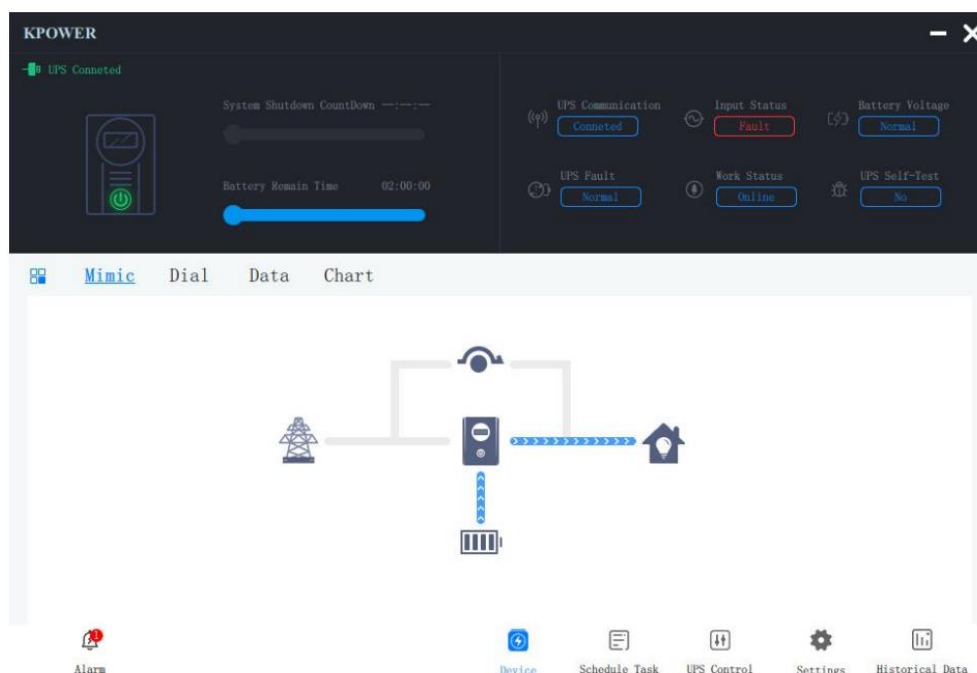


4 . Operation

4.1 Operation Modes

The UPS is a double-conversion on-line UPS that may operate in the following alternative modes :


◆Normal mode

The rectifier/charger derives power from the AC Mains and supplies DC power to the inverter while floating and boosting charge the battery simultaneously. Then, the inverter converts the DC power to AC and supplies to the load.

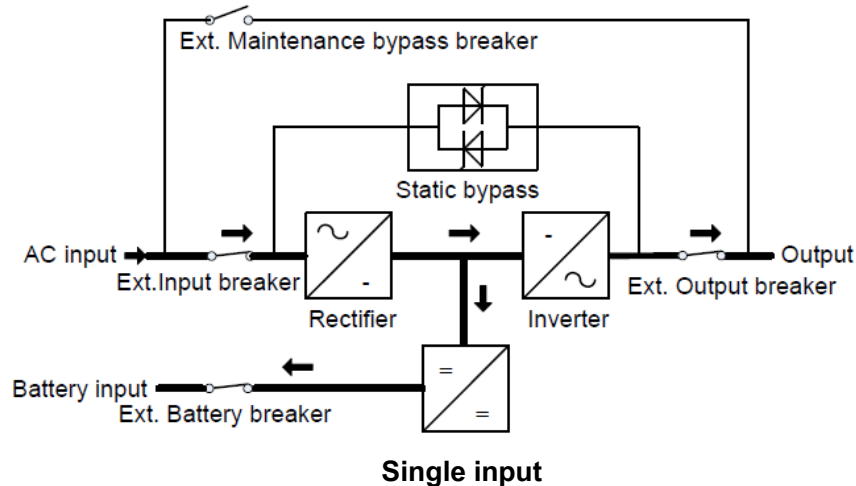


◆Battery mode (Stored Energy Mode)

If the AC mains input power fails, the inverter, which obtains power from the battery, supplies the critical AC load. There is no power interruption to the critical load. The UPS will automatically return to Normal Mode when AC recovers.

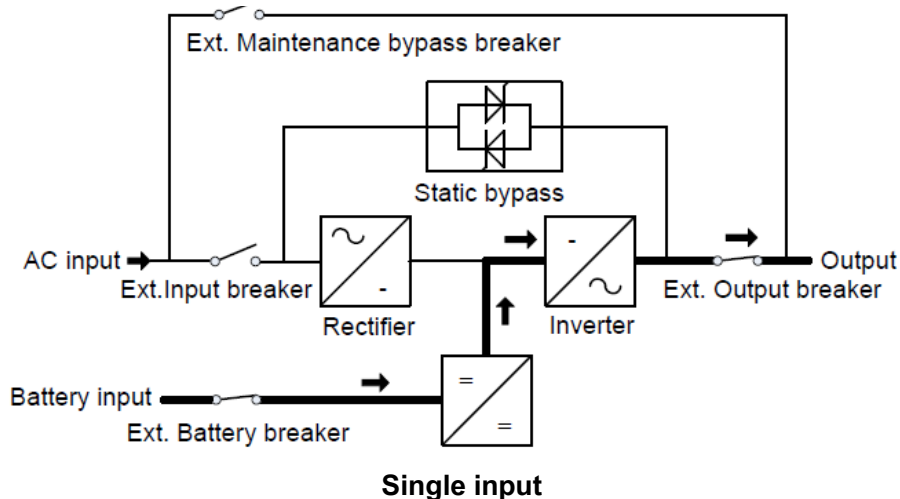


◆Bypass mode

If the inverter is out of order, or if overload occurs, the static transfer switch will be activated to transfer the load from the inverter supply to bypass supply without interruption to the critical load. In the event that the inverter output is not synchronized with the bypass AC source, the static switch will perform a transfer of the load from the inverter to the bypass with power interruption to the critical AC load. This is to avoid paralleling of unsynchronized AC sources. This interruption is programmable but typically set to be less than an electrical cycle e.g. less than 15ms (50Hz) or less than 13.33ms (60Hz).

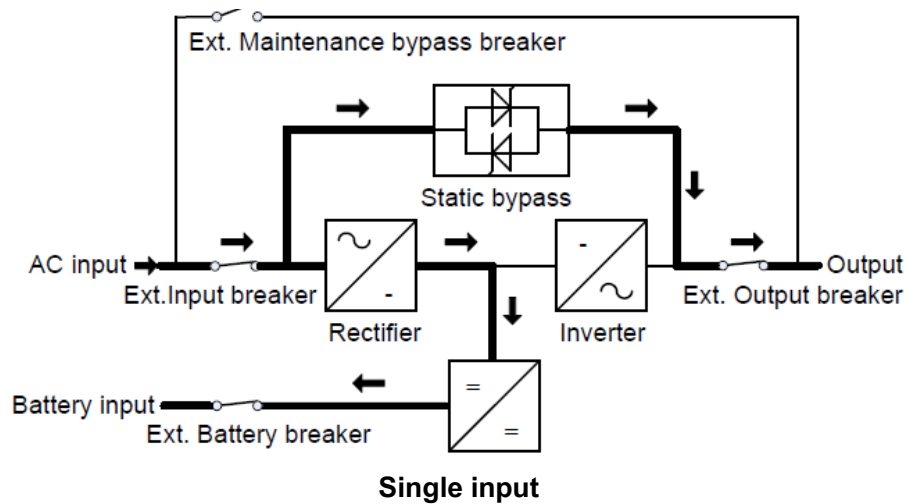


◆ECO Mode

When the UPS is at AC Mode and the requirement to the load is not critical, the UPS can be set at ECO mode in order to increase the efficiency of the power supplied. At ECO mode, the UPS works at Line-interactive mode, so the UPS will transfer to bypass supply. When the AC is out of set window, the UPS will transfer from bypass to Inverter and supplies power from the battery, and then the LCD shows all related information on the screen.

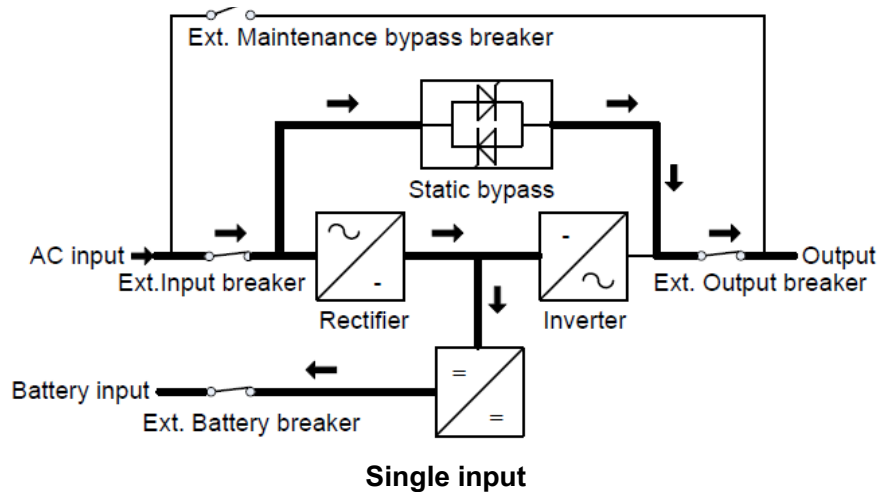

◆Maintenance mode (Manual Bypass)

A manual bypass switch is available to ensure continuity of supply to the critical load when the UPS is out of order or in repair and this manual bypass switch bears for equivalent rated load.

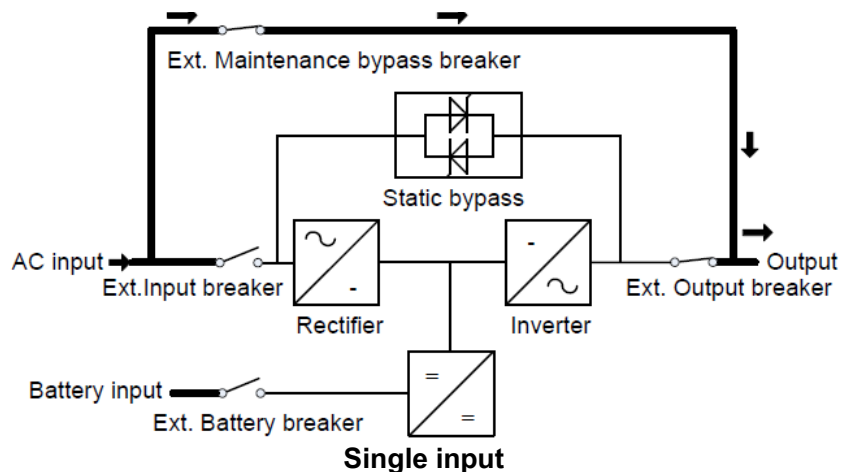

4.2 Turn on/off UPS

4.2.1 Restart procedure



CAUTION!

MAKE SURE GROUNDING IS PROPERLY DONE!

- ◆ Set the Battery Breaker to the “ON” position according to the user’s manual.



CAUTION !

Check to see if the load is safely connected with the output of the UPS. If the load is not ready to receive power from the UPS, make sure that it is safely isolated from the UPS output terminals

- ◆ Turn ON OUTPUT breaker of the PDU.
- ◆ Turn ON INPUT breaker of the PDU.

If the Rectifier input is within voltage range, the rectifier will start up in 30 seconds then the inverter will start up after then.

If the rectifier fails at startup, the bypass LED will light up. When the inverter starts up, the UPS will transfer from bypass mode to inverter mode, then the bypass LED extinguishes and the inverter LED lights up.

No matter whether the UPS can work normally or not, all the status will be shown on the LCD display.

4.2.2 Test procedure



CAUTION!

The UPS is operating normally. It may take 60 seconds to boost up the system and perform self-test completely.

- ◆ Switch OFF INPUT breaker of the PDU to simulate utility failure, the rectifier will turn off and the battery should feed the inverter without interruption. At this time, the LEDs of battery should be turned on.
- ◆ Turn ON INPUT breaker of the PDU to simulate utility recovery, the rectifier will restart automatically after 20 seconds and the inverter will supply to the load. It is suggested to use Dummy loads for testing. The UPS can be loaded up to its maximum capacity during load test.

4.2.3 MAINTENANCE BYPASS

To supply the load via Mains, you may simply active the internal mechanical bypass switch.



CAUTION!

The load is not protected by the UPS when the internal mechanical bypass system is active and the power is not conditioned.

Switch to mechanical bypass



CAUTION!

If the UPS is running normally and can be controlled through the display, carry out steps 1 to 6; otherwise, jump to Step 5.

- ♦ Open the cover of MAINTENANCE breaker of the PDU, the UPS turns to bypass mode automatically.
- ♦ Turn ON MAINTENANCE breaker of the PDU;
- ♦ Switch OFF BATTERY breaker and DISCONNECT all of the built-in batteries connector.
- ♦ Switch OFF INPUT breaker of the PDU;
- ♦ Switch OFF OUTPUT breaker of the PDU;

At this time the input source will supply to the load through the MAINTENANCE breaker.

Switch to normal operation (from mechanical bypass)



CAUTION!

Never attempt to switch the UPS back to normal operation until you have verified that there are no internal UPS faults.

- ♦ Turn ON OUTPUT breaker of the PDU.
- ♦ Turn ON INPUT breaker of the PDU.
- ♦ Turn ON BATTERY breaker and CONNECT all of the built-in batteries connector.

The UPS powers from the static bypass instead of the maintenance bypass, then the bypass LED will light up.

- ♦ Switch OFF the MAINTENANCE breaker of the PDU, then the output is supplied by the static bypass of the UPS.
- ♦ Put on the cover of MAINTENANCE breaker of the PDU.

The rectifier will operate normally after 30 seconds. If the inverter works normally, the system will be transferred from bypass mode to normal mode.


4.2.4 Cold start procedure

CAUTION!



UPS can cold-start when the input AC Utility Failure, but battery is normal. Follow these procedures.

- ◆ Turn ON the BATTERY breaker (If external battery is configured).
- ◆ Turn ON the OUTPUT breaker of the PDU.
- ◆ Trigger the cold start button 3 seconds as the position 1 below drawing.

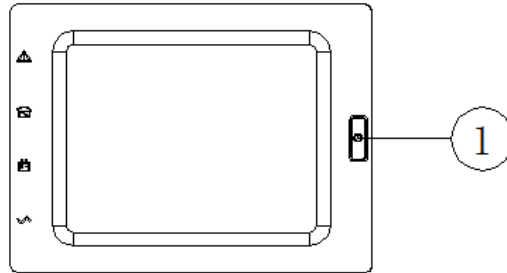

When battery normal, rectifier starts operation, 30s later, inverter starts and operates and battery LED on.

4.2.5 Shut down procedure

CAUTION!



This procedure should be followed to completely shut down the UPS and the LOAD. After all power switches, isolators and circuit breakers are opened, there will be no output.


- ◆ Switch OFF the BATTERY breaker (If external battery is configured).
- ◆ Switch OFF the INPUT breaker of the PDU.
- ◆ Switch OFF the OUTPUT breaker of the PDU.
- ◆ Turn off the inverter on the LCD, The UPS will shut down.
- ◆ Open the front panel of the built-in battery and disconnect all built-in battery connectors.
- ◆ To completely isolate the UPS from AC input, all input switches of Utility shall be completely off, which includes the ones for rectifier and bypass.
- ◆ The primary input distribution panel, which is often located far away from the UPS area, so a label should be posted to advise service personnel that the UPS circuit is under maintenance.

WARNING!



Wait for about 40 minutes for the internal D.C. bus bar capacitors to be completely discharged.



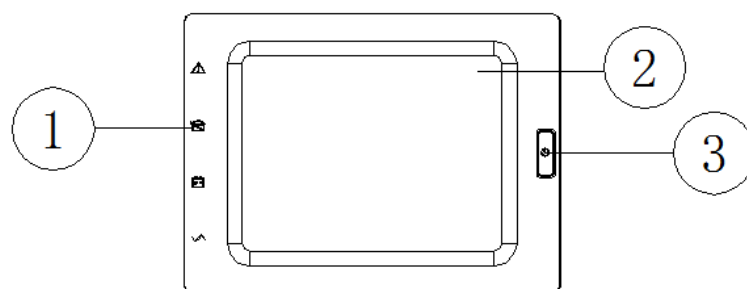

4.3 The LCD Display



Overview of the operating panel of the UPS

- (1) LED (from top to bottom: “alarm”, “bypass”, “battery”, “inverter”)
- (2) LCD display
- (3) Cold start button

LED indicator light


| Button | Function |
|---|---|
|  | Yellow : UPS alarm information Red : UPS fault information |
|  | Blue:UPS in bypass mode |
|  | Yellow:UPS in battery mode |
|  | Green:UPS works normally |
| Attention:These lights will display different indications in different operating modes. | |

Introduction




CAUTION!


The display provides more functions than those described in this manual.

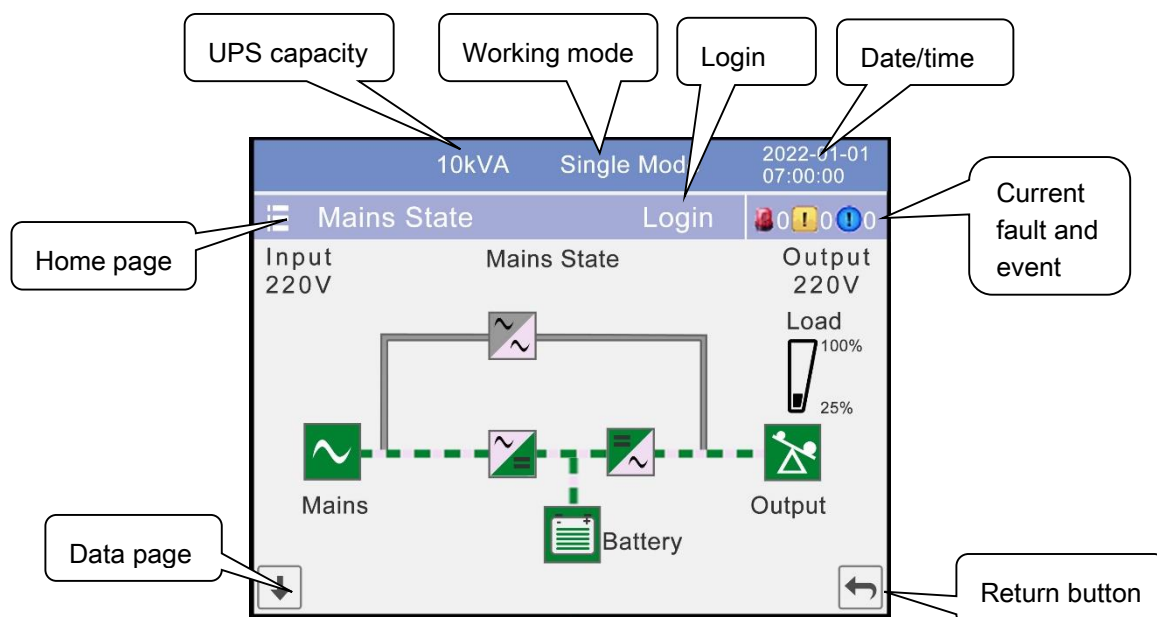

4.3.1 Datas : Displays the flow state of UPS work, and quickly enters real-time data by clicking on the block.

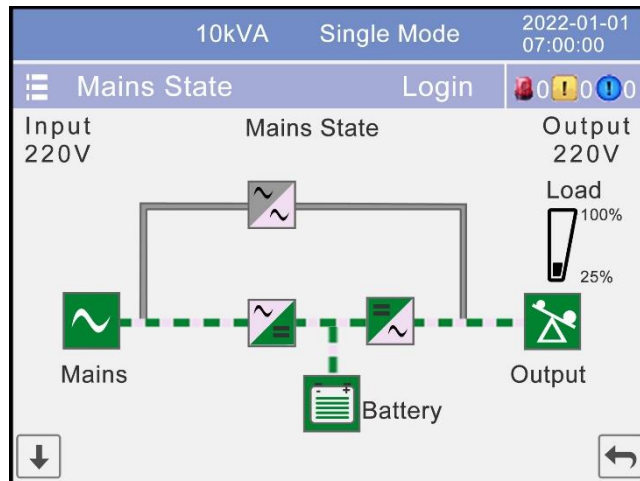


4.3.2 Status: View the voltage and current of the main, output, battery (can also be entered through by real-time data block), Temperature, BUS Voltage, through clicking on the block, enter the corresponding data window.

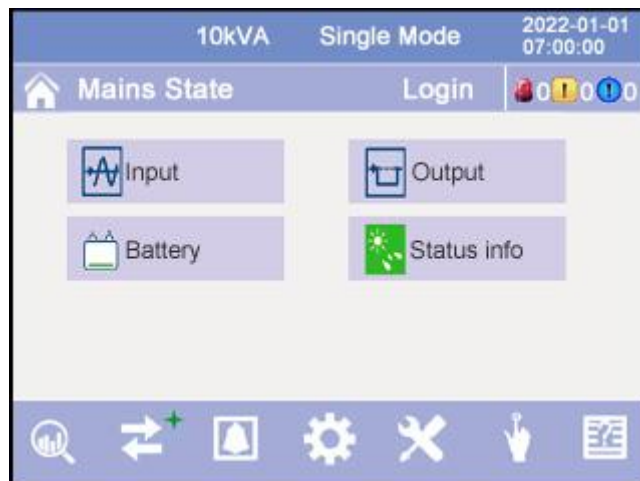

4.3.2.1 Input : Click the Input block to enter the Input data display window, click return to return to the previous window, click home page to return to the main page.

| Parameter | Value |
|---------------|-------|
| Voltage(V) | 218.0 |
| Frequency(Hz) | 50.0 |
| Current(A) | 1.4 |

4.3.2.2 Output : Click the output block to enter the output data display window, click return to return to the previous window, click home page to return to the main page.

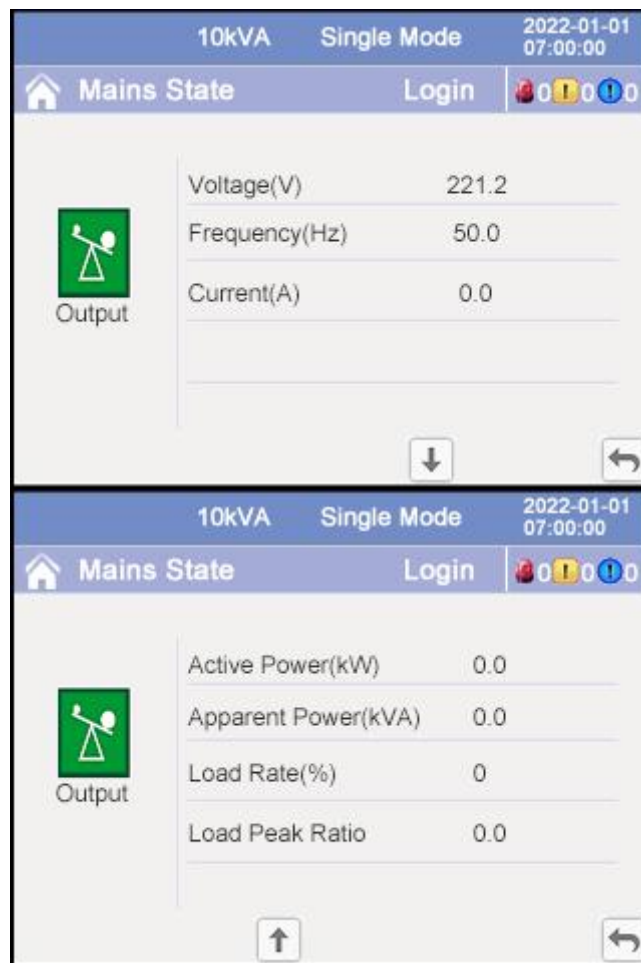

4.3.2.3 Battery : Click the battery block to enter the battery data display window, click return to return to the previous window, click home page to return to the main page.






4.3.2.4 Status : Click the status block to enter the status data display window, click return to return to the previous window, click home page to return to the main page.



4.3.3 Alarm : View the alarm and history of the UPS, and open or close the buzzer.

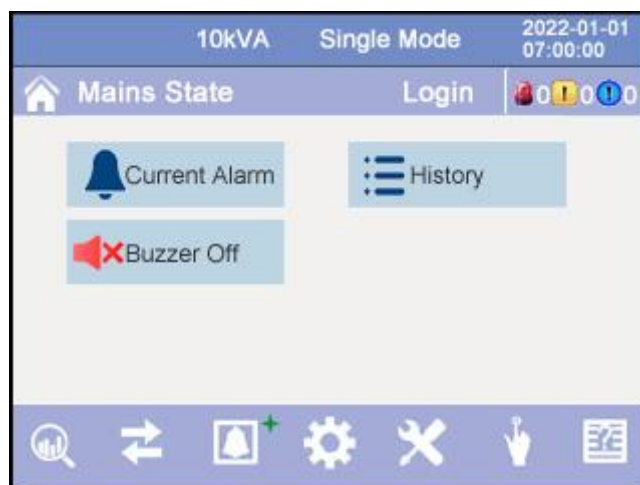


4.3.3.1 Current Alarm : Click the current alarm to enter the current alarm display window, click return to return to the previous window, click home page to return to the main page.




4.3.3.2 History : Click the history to enter the history recode display window, click return to return to the previous window, click home page to return to the main page.




4.3.3.3 Buzzer : Click the buzzer mute then the buzzer will mute and the block will change to red. If the buzzer need on, then click the block buzzer will on and the block will change to green. click return to return to the previous window, click home page to return to the main page.

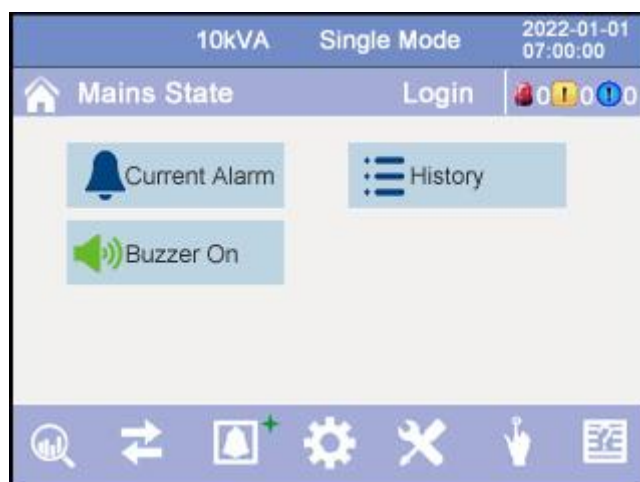

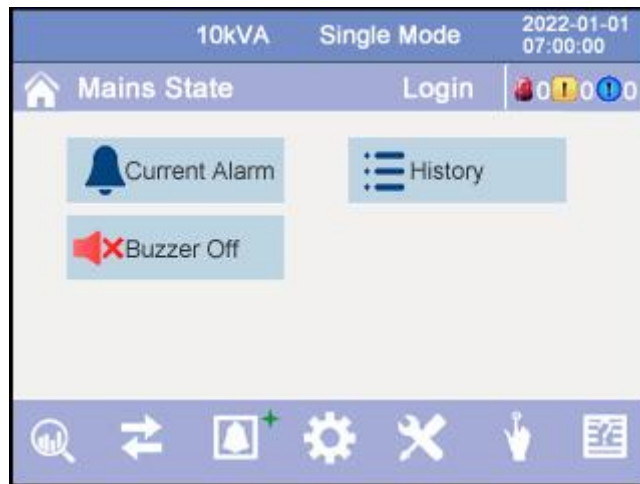

4.3.4 Setting : There are two levels, the basic setting for user settings, advanced setting for technical personnel, please contact the relevant technical personnel to enter advanced settings.

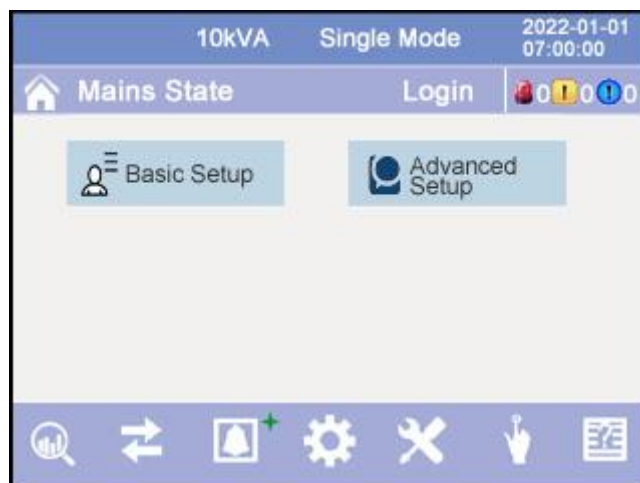

4.3.4.1 Basic Setting : Click basic setting, you can set the language, brightness, screen orientation , password, date and time.



4.3.4.1.1 Language : Click the language block witch you want and click the save config block to save. click return to return to the previous window, click home page to return to the main page.



4.3.4.1.2 Password : Click password block enter user password setting page, input old password and new password, then click save confirm to save the change. Password format is six numbers. click return to return to the previous window, click home page to return to the main page.

Password lock time : When LCD is not touched, it needs to re login when the setting value is set, click left or right block to change the value.



4.3.4.1.3 Screen Setup : Click the block to change value. Click return to return to the previous window, click home page to return to the main page.

Brightness: Click the text to input new value and click the save config block to save. Value range is 10~63, default value is 63. Click return to return to the previous window, click home page to return to the main page.

Backlight time : LCD backlight delay time, click the text to input new value and click save config block to save. Value range is 1~255, default value is 255. Click return to return to the previous window, click home page to return to the main page.

Screen Orientation: LCD screen orientation, click left or right block to change the screen orientation to horizontal and vertical , and click save. Click return to return to the previous window, click home page to return to the main page.



4.3.4.1.4 Date &Time: Click the text to select other value or input new value and click save config block to save. Click return to return to the previous window, click home page to return to the main page.

Date: current date



Time: current time



4.3.4.2 Advanced Setting : Click advanced setting, enter by input the correct password. The user password is “123456”.


Note: This operation is recommended to be operated by professionals, or under the guidance of professionals.



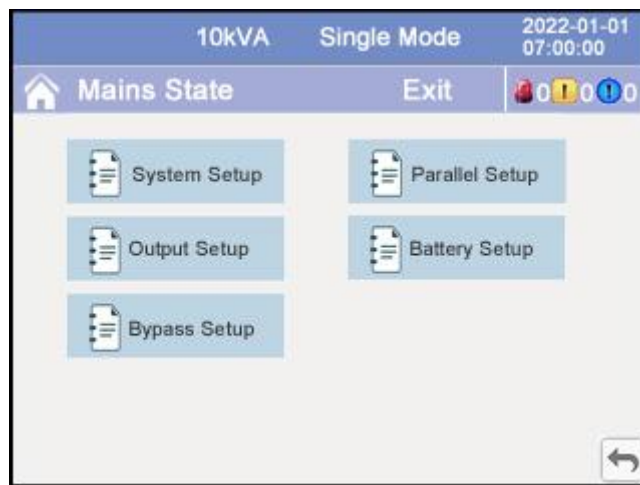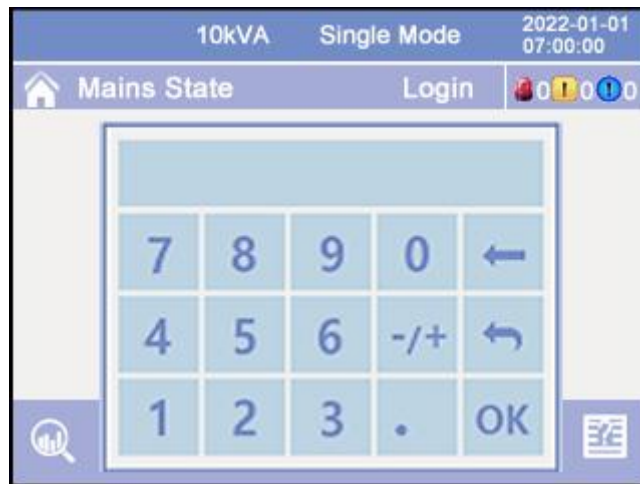

4.3.4.2.1 System setting : Click the text to select other value or input new value and click save config block to save. Click return to return to the previous window, click home page to return to the main page.

Working Mode : Select the work mode of UPS, work mode: Normal mode, ECO mode, CF mode, GEN mode

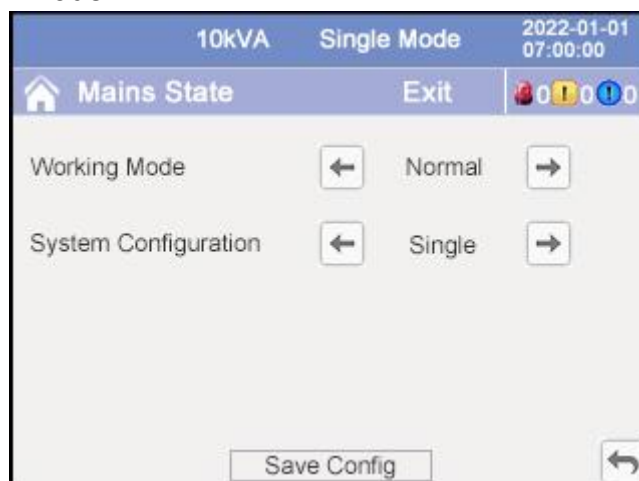

System Configuration : Select the configuration of system, system configuration: Single mode, Parallel mode.

4.3.4.2.2 Output setting

Output Frequency: Output frequency, The value can be 50Hz or 60Hz.

Output Voltage Level: Output voltage level, The value can be 208,220,230,and 240.

Inverter Voltage Adjust:Inverter Voltage Adjust,The value can be -5 to 5,0.5 value apart.

10kVA Single Mode 2022-01-01 07:00:00

Home Mains State Exit 0 0 0 0

Output Frequency (Hz) ← 50 →

Output Voltage Level (V) ← 220 →

Inverter Voltage Adjust (%) ← 0.0 →

Save Config ↩

4.3.4.2.3 Battery setting

Battery Group: Must modify the number to actual configuration, The value can be 1~8, default value is 1.

No Battery Warning: can be no warning when no batter after set disable, and is enable by default.

10kVA Single Mode 2022-01-01 07:00:00

Home Mains State Exit 0 0 0 0

Battery Group ← 1 →

No Battery Warning ← Disable →

Save Config ↩ ↓

Battery Number: Must modify the number to actual configuration, The value can be 16/18/20, default value is 16.

Single Battery Capability: Must modify the number to actual configuration, The value can be 5-200, default value is 7.

Cell boost voltage (V/Cell): The Cell boost voltage can be 2.30-2.40, default value is 2.30.

Cell float voltage (V/Cell): The Cell float voltage can be 2.20-2.29, default value is 2.25.



EOD Battery Volt (V/Cell): The Cell float voltage can be 1.60-1.80, default value is 1.75.

Temp Sensor Select: Default value is "OFF". Temperature sensor type select has two types: NTC and RS485. NTC is for single battery pack and short distance. RS485 is for multiple battery pack and far distance.

Float Temp Compens.: Temperature sensor compensation switch, when need to connect battery temperature sensor, change the value to enable. and is disable by default.

Float Temp Compens Coef. (V/Cell/°C): Temperature coefficient of compensate for battery float charging voltage. The value can be 0.001~0.007/cell/°C and is 0.003 by default.



OUTPUT2 EOD (V/Cell): The battery voltage of OUTPUT2 socket EOD can be 1.75/1.84/1.92 V/cell, and is 1.75V/cell by default.

OUTPUT3 EOD (V/Cell): The battery voltage of OUTPUT3 socket EOD can be 1.75/1.84/1.92V/cell, and is 1.75V/cell by default.



4.3.4.2.4 Bypass settings

Bypass Volt Prot Lower Limit: When the difference between the bypass voltage and the rated voltage exceeds the lower threshold for the bypass voltage, the system determines that the bypass voltage is abnormal and that the bypass is unavailable. The value can be -10%,-20%,-30%,-45%.

Bypass Volt Prot Upper Limit: When the difference between the bypass voltage and the rated voltage exceeds the upper threshold for the bypass voltage, the system determines that the bypass voltage is abnormal and that the bypass is unavailable. The value can be 10%,15%,20%,25%.

Bypass Freq Tracking Rate: When the difference between the bypass input frequency and the rated frequency is greater than this value, the system determines that the bypass frequency is not normal, and that the bypass is unavailable. The value range is $\pm 1\%$, $\pm 2\%$, $\pm 4\%$, $\pm 5\%$, $\pm 10\%$ (default).



4.3.4.2.5 Parallel settings

Parallel ID:Set the host and slave,the value can be 1~4.

Parallel Basic Units:Set up several UPS parallel, the value can be 2~4.

Parallel Redund Units:Set to reduce the total load, the value can be 0~3.

The screenshot shows a configuration screen for a 10kVA Single Mode system. The top bar displays '10kVA', 'Single Mode', and the date/time '2022-01-01 07:00:00'. Below the bar, there's a 'Mains State' header with an 'Exit' button and a status indicator showing '0' for each of four categories. The main area contains three settings: 'Parallel ID' set to 1, 'Parallel Basic Units' set to 2, and 'Parallel Redund Units' set to 0. Each setting has left and right arrow buttons for adjustment. At the bottom, there is a 'Save Config' button and a back arrow.

4.3.5 Maint : Screen Touch Correction and Battery Cycle Self-Check.

The screenshot shows a maintenance screen for a 10kVA Single Mode system. The top bar displays '10kVA', 'Single Mode', and the date/time '2022-01-01 07:00:00'. Below the bar, there's a 'Mains State' header with a 'Login' button and a status indicator showing '0' for each of four categories. The main area contains two large buttons: 'Battery Cycle Self-Check' and 'Screen Touch Correction'. At the bottom, there is a navigation bar with icons for various functions.

4.3.5.1 Battery Cycle Self-Check: can select check by Disable, Monthly, Weekly and Interval. The default value is Disable.

The screenshot shows a configuration screen for the Battery Cycle Self-Check. The top bar displays '10kVA', 'Single Mode', and the date/time '2022-01-01 07:00:00'. Below the bar, there's a 'Mains State' header with an 'Exit' button and a status indicator showing '0' for each of four categories. The main area contains three settings: 'Automatic Self-Check Mode' set to 'Disable', 'Date/Cycle(Day)' set to '0 Day 1 Hour 1 Min', and 'Check Time' set to '10s'. Each setting has left and right arrow buttons for adjustment. At the bottom, there is a 'Save Config' button and a back arrow.

4.3.6 Common: INV ON/OFF, Output Socket Control, Battery test.



4.3.6.1 INV ON/OFF

OFF: Turn off the UPS inverter

ON: Turn on the UPS inverter



4.3.6.2 Output Socket Control

OUTPUT2: Control OUTPUT2 socket on or off.

OUTPUT3: Control OUTPUT3 socket on or off.



4.3.6.3 Battery Test

Start Manual Self-Check: Start battery self-check immediately

Stop Manual Self-Check: Stop battery self-check immediately



4.3.7 About: check the software version

4.3.7.1 LCD Monitor and Control Firmware Version



4.4 Parallel parameters setting

Parallel system should be commissioning when the stand-alone are all intact.

Take 4 units in parallel for example.

- 1) Confirm the input/output wires connection and input phase sequence are correct; switch off the battery breaker of each UPS, and measure the battery voltage of all battery group are normal.
- 2) Connect the parallel cable, it should be formed loop connection.
- 3) Switch on the input breaker of unit 1, and access LCD setting interface to setting the System Configuration, Parallel ID, Parallel Basic Units, Parallel Redundant Units. The setting interface is showed as below, require setting the in series number and capacity of battery. The output voltage level and Bypass protection range are default setting.



- 4) Turn off the input breaker of Unit 1, and make sure the UPS is off. Turn on the input breaker of Unit 2, access the LCD setting interface, setting the parallel working mode, ID (NO.2), parallel 4 units, redundant number .The other setting are the same as UPS 1 operation.



- 5) For Unit 3 and Unit 4 UPS, the operation setting are all the same as Unit 1 and 2.
- 6) Turn on Input/output breaker of all the paralleled UPS, then confirm all the setting are correct. Each UPS has their owed different ID.
- 7) There are only one master in parallel system .The UPS has the smallest ID or the first to inverter is the master. You can turn on all the UPS after confirm all the setting are correct.





8) Turn on all the battery breaker and confirm the parameter (V/I) are normal.

9) Connected the Load, and check whether the output current are balance.

Switch on and off the utility breaker to test all the UPS converters system from Utility to battery and restored function are working find.

4.5 Display Messages/Troubleshooting

This section lists the event and alarm messages that the UPS might display. The messages are listed in alphabetical order. This section is listed with each alarm message to help you troubleshoot problems.

Display messages

Operational Status and Mode(s)

| No. | Information stand for | LED | | | |
|-----|--------------------------|------------|------------|------------|------------|
| | | Fault | Bypass | Battery | Inverter |
| 1 | Initialized | EXTINGUISH | EXTINGUISH | EXTINGUISH | EXTINGUISH |
| 2 | Standby Mode | EXTINGUISH | EXTINGUISH | X | EXTINGUISH |
| 3 | No Output | EXTINGUISH | EXTINGUISH | X | EXTINGUISH |
| 4 | Bypass Mode | EXTINGUISH | LIGHT | X | EXTINGUISH |
| 5 | Utility Mode | EXTINGUISH | EXTINGUISH | X | LIGHT |
| 6 | Battery Mode | EXTINGUISH | EXTINGUISH | LIGHT | EXTINGUISH |
| 7 | Battery Self-diagnostics | EXTINGUISH | EXTINGUISH | LIGHT | EXTINGUISH |
| 8 | Inverter is starting up | EXTINGUISH | X | X | EXTINGUISH |
| 9 | ECO Mode | EXTINGUISH | X | X | X |
| 10 | EPO Mode | LIGHT | EXTINGUISH | X | EXTINGUISH |
| 11 | Maintenance Bypass Mode | EXTINGUISH | EXTINGUISH | EXTINGUISH | EXTINGUISH |
| 12 | Fault Mode | LIGHT | X | X | X |

CAUTION : "X" means it is determined by other conditions

Fault Information

| No | Fault Cord | UPS Alarm Warning | Buzzer | LED |
|----|------------|---------------------------|--------------------|--------------------|
| 1 | 002 | Radiator Over Temperature | Twice per second | Fault LED lit |
| 2 | 004 | REC Over Current | Beep continuously | Fault LED lit |
| 3 | 005 | REC Power Fault | Beep continuously | Fault LED lit |
| 4 | 00E | Fan Fault | Beep continuously | Fault LED lit |
| 5 | 013 | Soft Start Failed | Beep continuously | Fault LED lit |
| 6 | 014 | BAT Charger Fault | Beep continuously | Fault LED lit |
| 7 | 016 | REC Comm. Fault | Once per 2 seconds | Fault LED blinking |
| 8 | 019 | REC Initializes Fault | Beep continuously | Fault LED lit |
| 9 | 01E | Rectifier Fault | Beep continuously | Fault LED lit |
| 10 | 041 | Inverter Fault | Beep continuously | Fault LED lit |
| 11 | 044 | INV IGBT SHORT | Beep continuously | Fault LED lit |
| 12 | 047 | Inverter relay Short | Beep continuously | Fault LED lit |
| 13 | 04A | Inverter relay Broken | Beep continuously | Fault LED lit |
| 14 | 04D | INV par. cable comm Fault | Twice per second | Fault LED lit |
| 15 | 051 | Output Short Circuit | Once per second | Fault LED blinking |
| 16 | 054 | INV Comm. Fault | Once per 2 seconds | Fault LED blinking |
| 17 | 057 | INV Initializes Fault | Beep continuously | Fault LED lit |
| 18 | 05A | INV self-test Fault | Beep continuously | Fault LED lit |
| 19 | 05E | DC Component Fault | Once per 2 seconds | Fault LED lit |
| 20 | 061 | DC bus abnormal | Beep continuously | Fault LED lit |
| 21 | 064 | INV Power Fault | Beep continuously | Fault LED lit |
| 22 | 067 | ENV Over Temperature | Twice per second | Fault LED lit |
| 23 | 068 | Load Sharing Fault | Twice per second | Fault LED lit |
| 24 | 069 | Par. cable Fault | Twice per second | Fault LED lit |
| 25 | 071 | Bypass SCR Short | Beep continuously | Fault LED lit |
| 26 | 074 | Bypass SCR Broken | Beep continuously | Fault LED lit |
| 27 | 077 | Bypass Feedback Fault | Beep continuously | Fault LED lit |

Alarm Information

| No | Alarm Cord | UPS Alarm Warning | Buzzer | LED |
|----|------------|----------------------|------------------|----------------------|
| 1 | 103 | Battery Over Voltage | Once per second | BATTERY LED blinking |
| 2 | 104 | BAT Low Pre-warning | Once per second | BATTERY LED blinking |
| 3 | 105 | Battery Reverse | Twice per second | BATTERY LED blinking |
| 4 | 106 | Battery EOD | Once per second | BATTERY LED blinking |

| No | Alarm Cord | UPS Alarm Warning | Buzzer | LED |
|----|------------|----------------------------|--------------------|-----------------------|
| 5 | 107 | Battery Voltage low | Once per second | BATTERY LED blinking |
| 6 | 108 | No Battery | Once per second | BATTERY LED blinking |
| 7 | 10B | Mains Freq. Abnormal | Once per 2 seconds | INVERTER LED blinking |
| 8 | 10C | Mains Volt. Abnormal | Once per 2 seconds | INVERTER LED blinking |
| 9 | 10D | REC Comm. Error | Once per 2 seconds | INVERTER LED blinking |
| 10 | 10E | Mains input lost | Once per 2 seconds | |
| 11 | 10F | REC Set Data Err. | Once per 2 seconds | FAULT LED blinking |
| 12 | 121 | INV Par. cable abnormal | Once per 2 seconds | FAULT LED blinking |
| 13 | 125 | INV Overload | Once per 2 seconds | INVERTER LED blinking |
| 14 | 126 | INV not synchronized | Beep continuously | INVERTER LED blinking |
| 15 | 12A | INV Set Data Err | Once per 2 seconds | FAULT LED blinking |
| 16 | 129 | INV Comm. Error | Once per 2 seconds | FAULT LED blinking |
| 17 | 133 | Bypass switch too frequent | Once per 2 seconds | BYPASS LED blinking |
| 18 | 143 | Parallel Overload | Once per 2 seconds | INVERTER LED blinking |
| 19 | 128 | Bypass Overload | Once per 2 seconds | BYPASS LED blinking |
| 20 | 131 | BPS Unable To Trace | Once per 2 seconds | BYPASS LED blinking |
| 21 | 132 | BPS Unavailable | Once per second | BYPASS LED blinking |

4.6 Options


SNMP card: SNMP / mini SNMP optional

- ◆ Loosen the 2 torque screws (on each side of the card).
- ◆ Carefully pull out the card. Reverse the procedure for re-installation

The slot called SNMP supports the MEGAtec protocol. SNMP card port is also a tool to remotely monitor and manage any UPS system

SNMP card supports the Modem Dial-in (PPP) function to enable the remote control via the internet when the network is unavailable.

In addition to the features of a standard SNMP card, SNMP card has the option to add NetFeeler Lite to detect temperature, humidity, smoke and security sensors. Thus, making SNMP card a versatile management tool. SNMP card also supports multiple languages and is setup for web-based auto language detection.

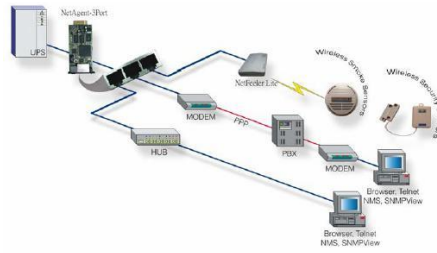


Typical topology of the UPS Network Management

Relay card

A 10-pin terminal is supported to offer the signals of Bypass, Utility Failure, Inverter On, Battery Low, UPS fault, UPS Alarm, and UPS Shutdown.

The relay communication card contains six dry contact outputs and one dry input. The inputs and outputs are factory programmed according to functions listed in the table

Table: Relay Contacts (communication card)

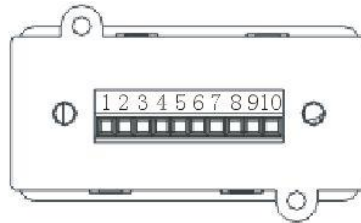

| Pin | Function Description | Input or Output |
|-----|----------------------|-----------------|
| 1 | Utility Failure | Output |
| 2 | Battery Low | |
| 3 | | |
| 4 | Bypass On | |
| 5 | UPS Fault | |
| 6 | Inverter On | |
| 7 | Summary Alarm | |
| 8 | common | |
| 9 | Remote Shutdown + | Input (5~12V) |



Appendix 1 Specifications

| GENERAL | | |
|-------------------------------------|--|--------------|
| Capacity | 6kVA / 6kW | 10kVA / 10kW |
| Topology | Double Conversion On-Line | |
| Cooling | Fan cooled | |
| Dimension W x D x H (mm) | 440*621.5*175 | |
| Net Weight (kgs) | 73 | 75 |
| Installation Type | Rack/Tower | |
| INPUT | | |
| Output Power | 208/220/230(Default)/240Vac | |
| Input Voltage Range | 110-300Vac(110-300Vac @ 50% load / 176-300Vac @ 100% load) | |
| Frequency Range | 40-70Hz | |
| Harmonic distortion(THDi) | < 3% | |
| Power Factor | >0.99 | |
| Input Connection | Terminal(L+N+G) | |
| OUTPUT | | |
| Output Power | 6kW | 10kW |
| Power factor | 1.0 | |
| Output Waveform | Pure Sinewave | |
| Online Efficiency (up to) | 95.0% | 95.5% |
| Economy mode efficiency | 98.8% | 99% |
| Output Voltage | 208/220/230(Default)/240Vac | |
| Voltage Regulation | ±1% | |
| Output Voltage Regulation (Dynamic) | ±5% | |
| Harmonic distortion(THDv) | < 1% (Full Linear load) | |
| | < 3% (Full nonlinear load) | |
| Output Frequency | 50/60Hz ± 10%(Line mode); 50/60Hz(default) ±0.1%(Battery mode) | |
| Over Load Capability (Online mode) | 105%~110%: UPS transfer to bypass after 60 minutes when the utility is normal 110%~125%: UPS transfer to bypass after 10 minutes when the utility is normal 125%~150%: UPS transfer to bypass after 1 minute when the utility is normal >150%: UPS transfer to bypass after 0.5 second when the utility is normal | |
| Over Load Capability (Battery mode) | 105%~110%: UPS after 10 minute shut down 110%~125%: UPS after 1 minute shut down 125%~150%: UPS after 10 second shut down >150%: UPS after 0.5 second shut down | |

| | | | |
|--|------------------------------|---|-------|
| Over Load Capability (Bypass mode) | | 105%~130%: Only Overload alarm 130%~150%: UPS after 10 minute shut down 150%~200%: UPS after 1 minute shut down >200%: after 0.5 second shut down | |
| Current Crest Ratio | | 3:1 | |
| Outlets - Total | Non-Programmable Receptacles | Terminal (L+N+G) | |
| | Programmable Receptacles | C19*2+C13*3 | |
| BYPASS | | | |
| Voltage range | | 208/220Vac Max.voltage: +25% (optional +10%,+15%,+20%) 230Vac Max.voltage: +20% (optional +10%,+15%) 240Vac Max.voltage: +15% (optional +10%) Min. voltage: -45% (optional -10%,-20%,-30%) | |
| Frequency range | | Frequency Protection Range: ±10% | |
| ECO Range | | Rated Voltage ± 10% | |
| BATTERY | | | |
| Nominal DC Voltage | | 192Vdc, 16pcs, 7/9Ah | |
| Charge Current (max.) | | 12A | 15A |
| Communication Section and User Interface | | | |
| Control panel LCD (English-Language)+LED | | 3.5 inch Color touch screen | |
| Communication Interface | | USB,RS232,RS485,COM port, Parallel port, Intelligent slot, SNMP card (optional), Relay card (optional) | |
| Emergency Power Off (EPO) | | Yes | |
| ENVIRONMENT | | | |
| Operating temperature | | 0°C~40°C | |
| Storage temperature | | -25°C~55°C (without batteries) | |
| Humidity range | | 0~95%RH (Non -condensing) | |
| Operating altitude | | 0~1000 meters Normally operate; 1000~3000 meters Derating | |
| Protection Class | | IP20 | |
| Noise level (1m, Online mode, full load, float charging) | | ≤45dB | ≤50dB |
| STANDARDS | | | |
| Safety | | EN IEC 62040-1:2019 + A11:2021 | |
| EMC | | IEC 62040-2:2016, EN IEC 62040-2:2018, C2 | |
| OTHERS | | | |
| Generator Compatible | | Yes | |
| Short Circuit | | Hold Whole System | |
| Overheat | | Line Mode: Switch to Bypass; Backup Mode: Shut down UPS immediately | |
| Low battery voltage | | Alarm and Switch off | |
| EPO | | Shut down UPS immediately | |
| Audible & Visual alarms | | Line Failure, Battery Low, Overload, System Fault | |

Appendix 2 Problems and Solution

In case the UPS cannot work normally, it might be wrong in installation, wiring or operation. Please check these aspects first. If all these aspects are checked without any problem, please consult with local agent right away and provide below information.

(1) Product model name and serial number.


(2) Try to describe the fault with more details, such as LCD display info, LED lights status, etc.

Read the user manual carefully, it can help a lot for using this UPS in the right way. Some FAQ (frequently asked questions) may help you to troubleshoot your problem easily.

| No. | Problem | Possible reason | Solution |
|-----|--|---|---|
| 1 | Utility is connected but the UPS cannot be powered ON. | Input power supply is not connected; Input voltage low; The input switch of the UPS is not switched on. | Measure if the UPS input voltage/frequency is within the window. Check if UPS input is switched on |
| 2 | Utility normal but Utility LED does not light on, and the UPS operates at battery mode | The input breakers of the UPS are not switched on; input cable is not well connected | Switch on the input breaker; Make sure the input cable is well connected. |
| 3 | The UPS does not indicate any failure, but output do not have voltage | Output cable does not well connected; Output breaker do not switch on | Make sure the output cable is well connected; Switch on the output breaker. |
| 4 | Utility LED is flashing | Utility voltage exceeds UPS input range. | If the UPS operates at battery mode, please pay attention to the remaining backup time needed for your system. |
| 5 | Battery LED is flashing but no charge voltage and current | Battery breaker does not switch on, or batteries are damaged, or battery is reversely connected. Battery number and capacity are not set correctly. | Switch on the battery breaker. If batteries are damaged, need to replace whole group batteries, Connect the battery cables correctly; Go to LCD setting of the battery number and capacity, set the correct data. |
| 6 | Buzzer beeps every 0.5 seconds and LCD display "output overload" | Overload | Remove some load |
| 7 | The UPS only works on bypass mode | The UPS is set to ECO mode, or the transfer times to bypass mode are limited. | Set the UPS working mode to UPS type(non-parallel) or to reset the times of transferring to bypass or re-start the UPS |
| 8 | Cannot Cold-start | Battery switch is not properly closed; Battery fuse is blown Or Battery low: Battery quantity set wrong; | Close the battery switch: Replace the fuse: Recharge the battery: Power ON the UPS with AC to set the battery quantity & quantity; |

Appendix 3 USB communication port definition

Definition of port :

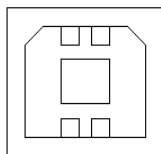

Connection between PC USB port and UPS USB port.

| PC USB port | UPS USB port | Description |
|-------------|--------------|--------------------|
| Pin 1 | Pin 1 | PC : +5V |
| Pin 2 | Pin 2 | PC : DPLUS signal |
| Pin 3 | Pin 3 | PC : DMINUS signal |
| Pin 4 | Pin 4 | Signal ground |

Available function of USB

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.

Communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none




CAUTION!

USB, RS232 and RS485 interface cannot be used at the same time, you can only use one of them at one time.

Appendix 4 RS232 communication port definition

Definition of Male port :

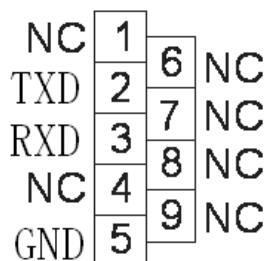

Connection between PC RS232 port and UPS RS232 port

| PC RS232 port | UPS RS232 port | |
|---------------|----------------|---------------------|
| Pin 2 | Pin 2 | UPS send,PC receive |
| Pin 3 | Pin 3 | PC send,UPS receive |
| Pin 5 | Pin 5 | ground |

Available function of RS232

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.

RS-232 communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none



CAUTION!

USB, RS232 and RS485 interface cannot be used at the same time, you can only use one of them at one time.

Appendix 5 RS485 communication port definition

Definition of port :



Connection between the Device's RS485 port and UPS RS485 port.

| device(RJ45) | UPS(RJ45) | Description |
|--------------|-----------|-------------|
| Pin 1/5 | Pin 1/5 | 485+ "A" |
| Pin 2/4 | Pin 2/4 | 485 - "B" |
| Pin 7 | Pin 7 | 12V |
| Pin 8 | Pin 8 | GND |

Available function of RS485

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.

Communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none



CAUTION!

USB, RS232 and RS485 interface cannot be used at the same time, you can only use one of them at one time.

RS485 port pin7 is 12Vdc!

Appendix 6 COM communication port definition

Definition of port :



Connection between the Device's RS485 port and UPS COM port.

| device(RJ45) | UPS(RJ45) | Description |
|--------------|-----------|-------------|
| Pin 1/5 | Pin 1/5 | 485+ "A" |
| Pin 2/4 | Pin 2/4 | 485 - "B" |
| Pin 7 | Pin 7 | 12V |
| Pin 8 | Pin 8 | GND |

Available function of COM

- ◆Connect to the Battery temperature sensor
- ◆Battery environment temperature monitoring for VRLA battery pack
- ◆Charging voltage modulation depending on batteries temperature

Communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none




CAUTION!

COM port pin7 is 12Vdc!

Appendix 7 EPO instruction

EPO is emergency power off of UPS. This function can be used to turn off the load and UPS thermal protection. For example, when the indoor temperature is too high. When EPO is activated, the UPS immediately turns off all outputs and power converter, and the UPS remains in the fault alarm state.

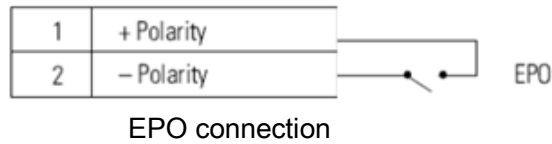

EPO function test:

- (1) Confirm that the machine is turned off and disconnected from the power grid;
- (2) The two pins of the EPO terminal are connected to a normally closed passive switch (e.g.: the connection terminal of the green female pin);
- (3) Connect to UPS and restart;
- (4) Turn on the EPO external switch. Test whether the UPS is turned off (e.g.: unplug the terminal);
- (5) UPS turns off when the switch is turned on, indicating that the EPO setting is valid;
- (6) To resume normal operation, close the external switch and restart the UPS.

Note: Please make sure that the EPO function is normal before using the UPS with critical equipment load to avoid unexpected power failure of the load.

Appendix 8 Optional port definition


The load segment set can control the power supply of the socket through the power management software or through the display and provide an orderly shutdown and startup of your equipment. For example, during a power outage, you can keep critical equipment running and shut down other equipment. This feature allows you to effectively manage battery usage and save battery power.

For example:


The EOD of output3 socket can be set to 1.92V/cell. When the battery voltage drops to 1.92V/cell, output3 socket will automatically disconnect the load output, which can extend the battery mode operation time of output1 and output2 socket loads.

Similarly, the EOD of output2 socket can be set to 1.84V/cell. When the battery voltage drops to 1.84V/cell, output2 socket will automatically disconnect the load output, which can extend the battery mode operation time of output1 load.

Finally, when the battery voltage drops to the EOD voltage (1.75V/cell), the UPS shuts down the all of output.

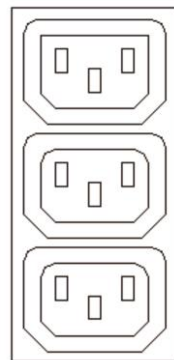

Output3 Socket

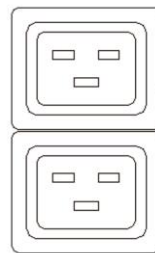

Output2 Socket